


BLOCK or BRICK WALL TYPE Fire Doors WITH WIRE TIES



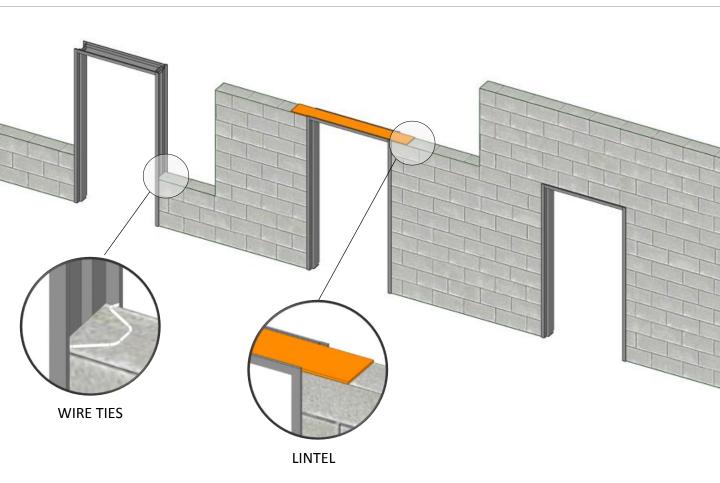

Example:

Pressed metal door frame being built into block or brick wall types as the wall is being constructed Wire ties used, as required, to tie the door frame to the brick courses Typical Example Only

E: mfdsales@melbournefiredoors.com W: www.melbournefiredoors.com.au