


MORTICE PREP TO SUIT LW3572

Mortice Preps can be optioned to both, Fire Rated Doors and Non Rated Doors: Save your time spent on site and Save your drill bits!

Final adjustments and plate fit off are still required to be done onsite by the door installer, but the bulk of the work has now been taken care of.

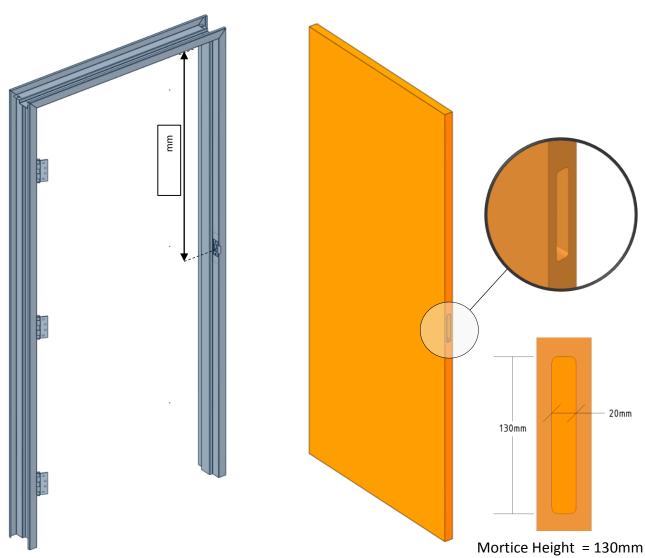

Measure from **Top Frame Reveal** to the **Center of Striker**. This measurement is used because it is static and cannot vary.

E.g: If measuring from the 'bottom' there are variables that can change, such as floor finish, additional door undercut.

Mortice Width = 20mm Mortice Depth = 100mm

Adjustments to H,W,D available upon request

Melbourne Fire Doors